



Product Description:

- Dental Organizer - Holds three boxes of gloves, two boxes of face masks, multi-fold towels, and patient bibs
- Additional opening in bottom of towel section to allow quick access
- Tabs on each side to hang patient bib clips
- Keyholes for wall mounting
- Made of quartz ABS plastic and clear PETG plastic

Primary Area for Product Usage:

- Patient dental care areas: clinics, dental labs, oral surgery rooms

Dispenses:

- Fits most brand name boxes as follows:
 - 3 boxes of gloves (top three compartments)
5.0" W x 8.0" H x 4.0" D (12.7 cm x 25.4 cm x 10.2 cm)
 - 2 boxes of face masks (middle compartment)
5.0" W x 8.0" H x 4.5" D (12.7 cm x 25.4 cm x 11.4 cm)
 - Bulk multi-fold towels (lower left section)
 - Patient bibs (lower right section)
 - Patient bib clips (tabs on sides)


Package Specifications:

- 18"L x 6"W x 29"H (45.7 cm x 15.2 cm x 73.7 cm)
- 7.0 lbs (4.0 kg) - approximated

Product Specifications (overall external dimensions):


- 17.61"W x 23.50"H x 5.08"D (44.7 cm x 59.7 cm x 12.9 cm)
- 4.4 lbs (2.0 kg) - approximated

Mounting Specifications:

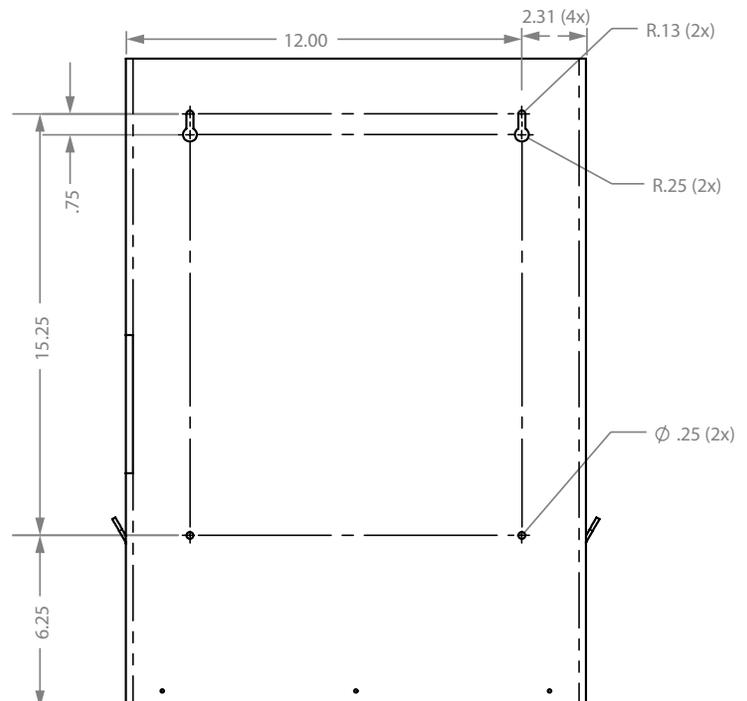





1

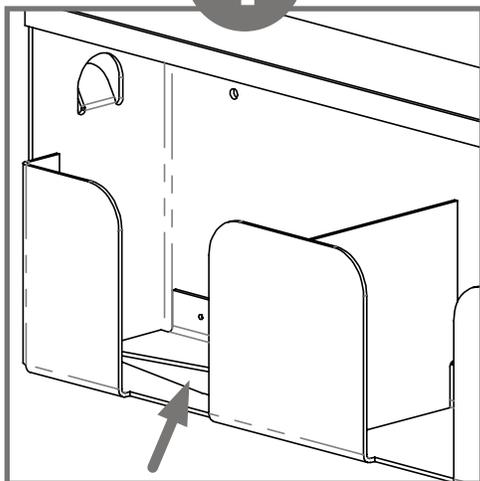

Quarter-fold towels can be accessed through convenient bottom opening.

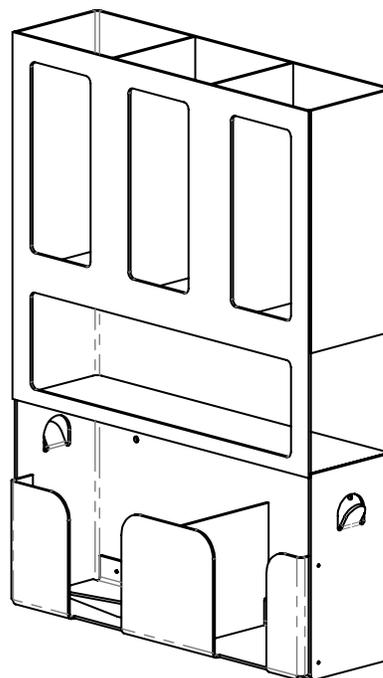


2

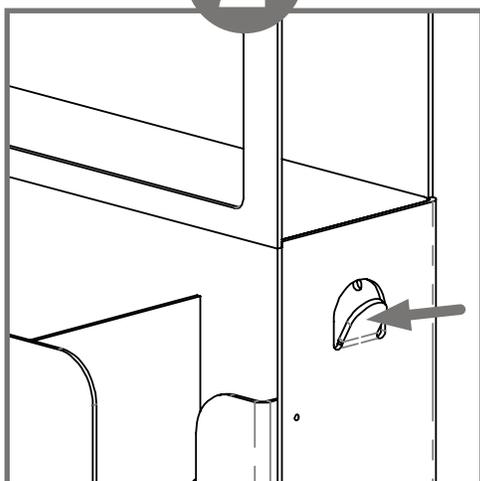

Incorporated tabs on both sides for hanging bib clips.

3

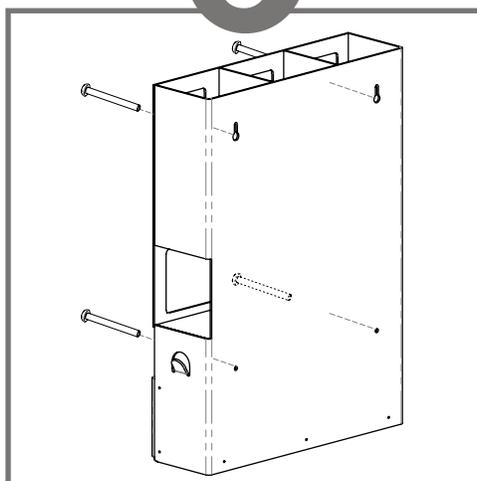

Organizer should be mounted securely to a wall through keyholes and through-holes in back with screws approved and provided by building maintenance.

Parts included:

- Organizer

Tools required:

- No tools are required for assembly of the organizer



Advantage

Designed for Long-Term Heavy-Duty Applications

The combination of copolymers (Acrylonitrile, Butadiene, and Styrene) gives ABS an excellent combination of strength, rigidity, and toughness.

Major Benefits

Durable

ABS has good chemical and stress-cracking resistance. It is tough, dimensionally stable, and will hold up to long-term use.

Cleaning

Use a mild cleaner or soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Strength

ABS plastic possesses good strength and performance characteristics at a reasonable cost. These qualities make it perfect for a wide variety of applications, including medical and laboratory equipment.

Appearance

The quartz, lightly textured finish has a clean, attractive look.



Main material is ABS Plastic



Advantage

Designed for Long-Term Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by Bowman® Dispensers exclusively.

Major Benefits

Toughness

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

Chemical Resistance

PETG resists a variety of chemicals and commonly used cleaning agents.

Impact Strength

PETG is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clarity and Gloss

PETG looks good and makes an attractive display. Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. Complies with FDA regulations for food contact.

Easy to Clean

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.



Clear plastic on towel and bib holders is PETG plastic