

Product Description:

- Protection System - Double Gown
- Two sections hold a variety of gowns; three sections hold boxes of gloves; two sections hold boxes of earloop masks; one storage shelf for miscellaneous medical supplies
- Cut out for door hanger or keyholes and screw holes for wall mounting
- Made of quartz beige powder-coated aluminum

Primary Area for Product Usage:

- Primary care areas: O.R. dressing rooms, surgery centers, labs, dental centers, interventional radiology

Dispenses:

- Gowns: Flat pack gowns, two stacks of thumb loop gowns, and/or two boxes of thumb loop gowns
- Two boxes of earloop masks, vertically, up to 4.85"W x 8.50"H x 4.50"D (12.3 cm x 21.6 cm x 11.4 cm)
- Three boxes of gloves up to 9.85"W x 5.13"H x 4.50"D (25.0 cm x 13.0 cm x 11.4 cm)
- Shelf area for miscellaneous supplies is 9.85"W x 6.13"H x 4.50"D (25.0 cm x 15.6 cm x 11.4 cm)

Accessories (sold separately):

- Sign Holder MP-047
- Door and Wall Hangers: MB-450, MB-500, MB-510, MB-600, and MB-601
- Clip-On Caddy Dispensers: MP-015 and MP-085


Package Specifications:

- 26"L x 6"W x 32"H (66.0 cm x 15.2 cm x 81.3 cm)
- 13.0 lbs (5.9 kg) - approximated

Product Specifications (overall external dimensions):

- 25.05"W x 30.75"H x 4.65"D (63.6 cm x 78.1 cm x 11.8 cm)
- 11.0 lbs (5.0 kg) - approximated

Mounting Specifications:

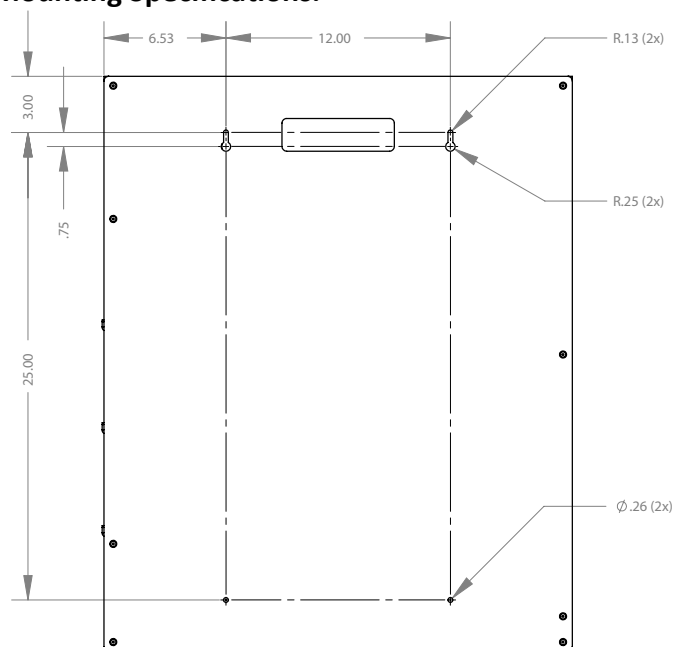



Advantage

Designed for Long-Term Use

Our aluminum dispensers and stands are coated with polyester triglycidyl isocyanurate (TGIC) powders, making them highly corrosion resistant. They are lightweight, attractive, functional and provide years of service.

Major Benefits

Durable

Our powder-coated aluminum dispensers resist corrosion, chipping, and flaking. This material will provide long-lasting products that hold up well, even in tough environments.

Cleaning

The semi-gloss powder-coated finish resists mild chemicals and cleaning agents, such as Windex or glass cleaners. Standard hospital cleaning supplies are approved for use on our powder-coated products or can be cleaned with a damp cloth or mild soap and water. Scotch-Brite, steel wool or any abrasive products should not be used.

Strength

Powder-coated aluminum is ideal for dispensers used in a healthcare or industrial settings. It is impact resistant and is not affected by extremes in temperature.

Appearance

The clean, bright appearance of powder-coated aluminum looks attractive and provides a professional image in all environments.

